

# Cambiar firmware

Subimos el firmware al directorio tmp:

```
sysupgrade -n /tmp/Hotspot1-sysupgrade.bin
```

## UCI

Muestra cambios sin grabar:

```
uci changes
```

Los graba y aplica cambios:

```
uci commit  
reload_config
```

# Omnitik UPA-5hNd

Enchufar POE puerto uno y cable al PC. La omnitik tiene la ip 192.168.88.1

## hotspot

Cambiaos la IP:

```
uci set network.lan.ifname='eth0'  
uci delete network.lan.type  
uci set network.lan.ipaddr='192.168.1.11'  
uci set network.lan.netmask='255.255.255.0'  
uci set network.lan.gateway='192.168.1.1'  
uci set network.lan.dns='8.8.8.8'  
uci commit  
reload_config
```

From:  
<http://wiki.legido.com/> - Legido Wiki

Permanent link:  
<http://wiki.legido.com/doku.php?id=guifi.net:openwrt>

Last update: 2020/05/06 22:30

